
## eleVent, MDO, MDR and RAG adaptor

half-way in.

## Loc-it-in mounting clip instructions

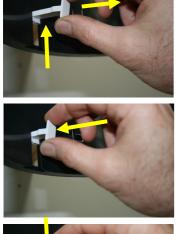


After placing adaptor in hole, move mounting clip upward and pull inwards. (instructions assume ceiling mounted adaptors)

With adaptor in position, push mounting clip about







downwards until it stops against the plaster. Note: for plaster thickness greater than 20 mm, the top of the clip can be cut off.

While continuing to push adaptor against plaster, push
clip in 90% of the way. Repeat for all the clips.

Elevent size	Hole size
100	122
150	172
200	222
250	300
300	350

**\_\_**.

Return air adaptor	Hole size
380 x 510	525 x 396

MDR size	Hole size
300 x 100	308 x 115
350 x 150	356 x 162

MDO size	Hole size
220 x 220	225 x 235
300 x 300	310 x 320
360 x 360	360 x 370
390 x 390	395 x 405
390 x 585	405 x 600
360 x 535	370 x 550







To remove, place small flat blade screwdriver under clip.

If the adaptor is holding firmly against the plaster, push all clips in the rest of the way. However if any edges are

Gently level clip inwards.

sagging, re-do clips.

## **PALTECH**